

Pendant Pairing Instructions

SureSafe Alarm Button Options:

SureSafe Alarms can be paired with either pendant alarm buttons or wristband alarm buttons.

Each SureSafe Alarm can be 'paired' with a maximum of 2 alarm buttons at any one time. For example, you can have 2 pendants 'paired' with the alarm, or you can have 1 x pendant and 1 x wristband.

Please note that you can never have more than 2 alarm buttons paired at any one time so if you have purchased a Wristwatch Combo Product then one of your pendants will be a spare (in case one is damaged or misplaced).

Pendant 'Pairing' Instructions:

Please follow these instructions to 'pair' new or replacement pendants with your SureSafe Alarm (you do not need to follow these instructions if you have received a new SureSafe Alarm as they will already be paired).

1. Turn on the alarm. As soon as you hear the beep then press and hold the blue 'help' button on the main unit.
2. Hold for 5 seconds until the red light on top of the unit stays lit.
3. When the red light is constantly lit, keep hold of the blue button and press the button on the pendant/wristband you are looking to 'pair'.
4. You will hear a single beep, at which point you can release the buttons.
5. You have now paired the alarm button.
6. You can repeat this process for additional alarm buttons remembering that you can only pair 2 at any one time.

Pendant & Wristband Batteries:

All orders come complete with new batteries in the wristbands and pendants. Batteries should last a minimum of 1 year but can last well in advance of 2 years. Batteries are replaceable.

The correct LED colours are:

| | Battery OK | Low Battery |
|-----------|------------|----------------|
| Pendant | Green | Red |
| Wristband | Bold Red | Pale/Light Red |