

BABY LOCK SERGER ACCESSORIES

General Purpose Foot

(BLCS-GP)

Instructions

The Baby Lock Cover Stitch machine has the convenience of a snap-on presser foot. The raised markings on the toe of the foot are seam line guides. They indicate the needle positions to help guide your fabric for accurate seaming.

To Release:

1. Raise the presser foot lever.
2. Lower the cutting blade.
3. Raise the needles to the highest position.
4. Push the presser foot release lever located at the back of the presser foot holder.
5. Carefully turn the presser foot clockwise 90 degrees.
6. Slide the presser foot to the rear to remove.

To Replace:

1. Raise the presser foot lever.
2. Lower the cutting blade.
3. Raise the needles to the highest position.
4. Slide the foot from the left to the right.
5. Align the bar of the foot with the groove in the holder.
6. Lower the presser foot lever to snap into place.



Inserting Tapes - Cover Stitch

The front of the presser foot has a tape sewing slot. The slot on the standard foot can be used with the narrow, wide, or triple cover stitches.

Decorative tape, ribbon, or elastic can be inserted into the slot and serged with the cover stitch. Insert the ribbon or elastic into the slot and down under the foot to the needles.



FOR THE LOVE OF SEWING