


BABY LOCK SERGER ACCESSORIES

Cover/Chain Stitch Foot

(BLE8-CCF)

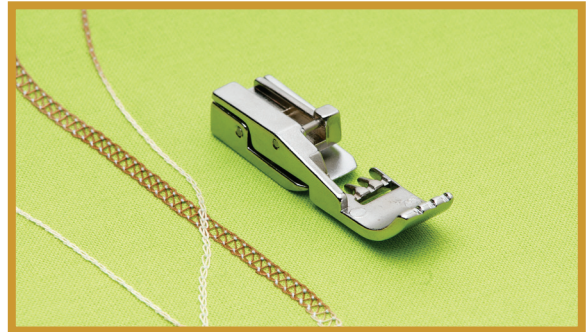

Use the Cover/Chain Stitch foot for better visibility and easier control for stitching curves or turning tight corners and attaching tape and ribbons.

MACHINE SETTINGS:

Stitch: Left, right or center chain stitch, narrow, wide or triple cover stitch. (Select one and check with instruction book for length and width setting for specific stitch selection.)

Stitch Length: 3 to 4

Ribbon or tape: up to 8mm wide

INSTRUCTIONS:

1. Snap on the Chain/Cover Stitch foot and set up the machine for the stitch you desire.
2. Raise the presser foot.
3. Place fabric under the foot.
4. If using the ribbon or tape slot in the front of the foot, insert ribbon into the slot and under the foot.

Note: The slot in the front of the foot is 7mm wide and will accommodate up to an 8mm wide ribbon or tape. Ribbons or tapes wider than 8mm are not recommended as they will not flow smoothly and will not lie flat when stitched.

5. Lower the presser foot.
6. Turn the handwheel toward you to form 2 or 3 stitches.
7. Start to sew slowly.
8. After the first few stitches, stop and cut excess threads.
9. Start the next seam at the toe of the presser foot.
10. Test sew sample for desired effect. Be careful not to push or pull the fabric. The serger will feed it evenly without help.

Note: This foot is not recommended for stitching over heavy or bulky areas such as seam allowances on mid-heavy weight polar fleece. It is recommended that seam allowances are clipped or trimmed to remove excess bulk before using this foot over such areas.



FOR THE LOVE OF SEWING