

User Manual - Thermacell Repellents Inc. B2B-DOCK10 (Model Z06-A-002)
10 Device Charging Dock



WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury. Before using this appliance (charger), read all instructions and cautionary markings in this manual, on the appliance, and device to prevent misuse of the products and possible injury or damage.



WARNING: Do not expose this appliance to wet or damp conditions. Water entering the appliance will increase the risk of electric shock. Do not use, store, or charge devices or products in locations where the temperature is less than 30°F or more than 120°F. Do not store this appliance in a vehicle.



WARNING: Disconnect from the power supply before inspecting, cleaning, or performing any maintenance. Failure to follow these instructions can result in death, serious personal injury, or property damage.



WARNING: There are no user serviceable parts inside this appliance. This appliance is only to be serviced by an authorized Thermacell service provider.



CAUTION: To reduce the risk of injury, charge ONLY Thermacell E95 Devices

IMPORTANT SAFETY INSTRUCTIONS

- SAVE THESE INSTRUCTIONS - DANGER: TO REDUCE RISK OF FIRE OR ELECTRIC SHOCK CAREFULLY FOLLOW THESE INSTRUCTIONS. This manual contains important safety and operating instructions for the appliance and devices.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- This appliance is not a TOY, children should be supervised not to play with the appliance.

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product		
Symbol	Signal Word	Meaning
	DANGER :	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.		
Symbol	Name	Designation / Explanation
	Safety Alert	Indicates a potential personal injury hazard
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
V	Volts	Voltage
Hz	Hertz	Frequency (cycles per second)
A	Amps	Current
AC	Alternating Current	Type of current
DC	Direct Current	Type of current

GENERAL USE

- Do not abuse cord or appliance. Never use the cord to carry the appliance.
- Do not pull the appliance cord rather than the plug when disconnecting from receptacle. Damage to the cord or appliance could occur and create an electric shock hazard.
- If appliance is damaged, have it replaced by an authorized Thermacell service provider. Do not use the appliance if there is visible damage to the case or enclosure in order to avoid a hazard
- If the supply cord is damaged, it must be replaced by an authorized Thermacell service provider in order to avoid a hazard
- Make sure cord is located so that it will not be stepped on, tripped over, come in contact with sharp edges or moving parts or otherwise subjected to damage or stress. This will reduce the risk of accidental falls, which could cause injury, and damage to the cord, which could result in electric shock. Keep cord and appliance away from heat to prevent damage to housing or internal parts.
- Do not let gasoline, oils, petroleum-based products, etc. come in contact with plastic parts. They contain chemicals that can damage, weaken, or destroy plastic.
- An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire and electric shock. If extension cord must be used, make sure:
 - That pins on the plug of extension cord are the same number, size and shape as those of plug on appliance.
 - That extension cord is properly wired and in good electrical condition; and
 - That wire size is large enough for AC ampere rating of appliance as specified below: Max Cord Length of 25 Feet with a Minimum Cord Size of 16 AWG (American Wire Gauge)
- Do not operate appliance with a damaged cord or plug, which could cause shorting and electric shock. If damaged, have the ap replaced by an authorized Thermacell service provider.
- Do not operate appliance if it has received a sharp blow, been dropped, or otherwise damaged in any way. Take it to an authorized Thermacell service provider for electrical check to determine if the appliance is in good working order.

- Do not disassemble appliance. Take it to an authorized Thermacell service provider when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- Unplug appliance from outlet before attempting any maintenance or cleaning to reduce the risk of electric shock.
- Disconnect appliance from outlet when not in use. This will reduce the risk of electric shock or damage to the appliance. It also will help prevent damage to the appliance during a power surge.
- This appliance is only to be used to charge a MAXIMUM of ten (10) Thermacell E95 devices at a time. It should not be used to charge any other device or battery.
- Save these instructions.

GENERAL MAINTENANCE

- Unplug the appliance before doing any maintenance or cleaning
- Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use.
- Use clean cloth to remove dirt, dust, oil, grease, etc.
- Do not expose the device to water or otherwise allow the device to get wet.
- Replacement Fuse: F 3.15A 250V 5X20mm

STORAGE

- Unplug the appliance before long-term storage and wrap the cord in the integrated cable storage area.

E95 DEVICE INSTALLATION

To charge an E95 Device align the support structures of any of the ten charging ports with the bottom of the device. Gently place the device onto the charging station so that its docking pins can contact the dock. Once the device is placed on the port, the Battery Indicator LEDs will start to pulse, signifying that the device is charging. See the graphics below or the device user manual for details on charging LEDs and Sequence.

DEVICE CHARGING

- **Charging:** 
- **Fully Charged:** 
- **Low Battery** (*Less than 20 minutes*): 
- **Battery Too Low to be Turned On:** *Flashes* 

FCC NOTICE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help