




Valencia Pipe Company Tanks
 Septic Tank Buoyancy Mitigation Recommendations



Valencia Pipe Company 1000 Gallon Septic Tank
 Additional Weight Necessary

" Soil Cover*	" Groundwater Rise Above Base of Tank						
	6	12	18	24	30	36	42
6		400	2100	3700	5400	7000	8700
9			600	2300	3900	5600	7200
12				800	2500	4100	5800
15					1000	2700	3400
18						1200	2900
21							1400
24							
27							
30							

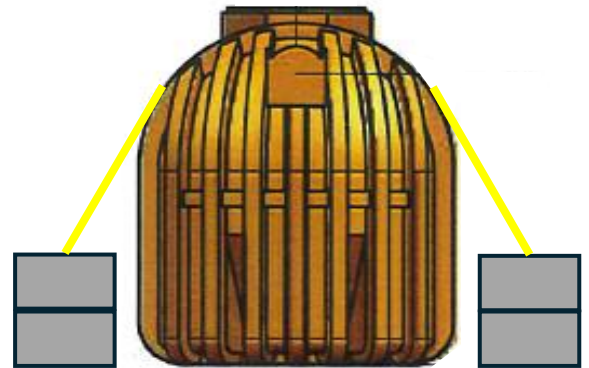

Valencia Pipe Company 1500 Gallon Septic Tank
 Additional Weight Necessary

" Soil Cover*	" Groundwater Rise Above Base of Tank						
	6	12	18	24	30	36	42
6		600	3000	5300	7600	10000	12300
9			900	3200	5600	7900	10300
12				1200	3500	5900	8200
15					1400	3800	6100
18						1700	4100
21							2000
24							
27							
30							



Concrete Block






Pressure Treated Lumber



Concrete Parking Lot Bumper

* - Assumes 100# per cubic foot of top covering

 No additional weight or restraints necessary
 Amount of extra weight / restraint necessary
 Do not install

Installing an underground septic system is a labor- and time-intensive endeavor that requires some expertise. If you are unsure of any aspect of your septic tank installation, hire or consult with a qualified tank installer.

Valencia Pipe Company
 28305 Livingston Ave.
 Valencia, CA 91355



www.valenciapipe.com
 (661) 257-3923
 (661) 257-3928 (fax)